


## Model: SF-101S Digital Temperature Controller

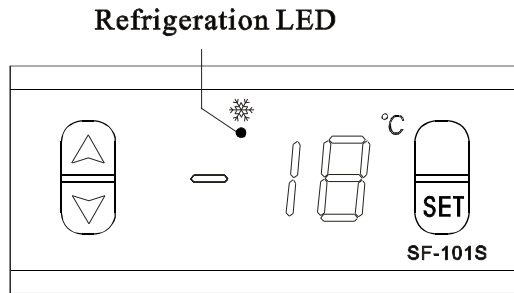

### Features of Function

- Mini-sized and integrated intelligent control .
- Temperature Display/ Temperature Control/ Automatic defrost by turning off/ Value Storing/ Self Testing

### Specifications

1. Power supply: 12VAC (one transformer matches with one temp. controller)
2. Temperature sensor: NTC
3. Range of temperature displayed:  $-45^{\circ}\text{C} \sim 99^{\circ}\text{C}$ ; Accuracy:  $\pm 1^{\circ}\text{C}$
4. Range of set temperature:  $-45^{\circ}\text{C} \sim 45^{\circ}\text{C}$ ; Factory default:  $0^{\circ}\text{C}$
5. Dimension: 77(Length)  $\times$  35(Width)  $\times$  30(Depth)mm  
Mounting hole dimension: 71(Length)  $\times$  29(Width)mm
6. Temperature of the operating environment:  $-10^{\circ}\text{C} \sim 60^{\circ}\text{C}$   
Relative Humidity: 20% ~ 90% (Non-condensing)
7. Relay output contact capacity:  
Compressor relay: N.O. 30A/250VAC

### Front Panel Operation

1. Set temperature (compressor stop temperature) adjustment
  - Press **SET** button, the set temperature is displayed.
  - Press **▲** or **▼** button to modify and store the displayed value , Press **SET** button to exit the adjustment and display the cold room temperature.
  - If no more button is pressed within 6 seconds, the cold room temperature will be displayed.  
(Set temperature adjustment range: parameter E1~E2)
2. Refrigeration LED: During refrigeration, the LED is on; When the cold room temp. is constant, the LED is off; During the delay start, the LED flashes; during defrosting, the LED is flashes.
3. Parameter setup
  - Press **SET** button and hold for 6 seconds to enter the parameter setup mode while E1 flashes.
  - Press again **SET** button to select sequentially from the parameters : E1, E2, E3, E4, E5.
  - Press **▲** or **▼** button, the value of parameter will be displayed and can be modified and stored.
  - If no more button is pressed within 6 seconds, the cold room temperature will be displayed.

Parameter	Function	Set range	Default
E1	Lower setpoint limit	$-45^{\circ}\text{C} \sim \text{Set temp.}$	$-35^{\circ}\text{C}$
E2	Higher setpoint limit	$\text{Set temp.} \sim 45^{\circ}\text{C}$	$20^{\circ}\text{C}$
E3	Temp. hysteresis	$1 \sim 10^{\circ}\text{C}$	$4^{\circ}\text{C}$
E4	Comp. start delay time	$0 \sim 10 \text{Min}$	2Min
E5	Offset on room temp.	$-10 \sim 10^{\circ}\text{C}$	$0^{\circ}\text{C}$

#### 4. Lock parameters:

In normal operating, press **▼** button and hold for 6 seconds to lock the parameters if "OFF" is displayed (No modification is allowed), or to unlock if "ON" is displayed. Parameter can be displayed only and can not be modified if locked.


## Function detail

1. Temperature controller
  - After turning on for the delay time ,the compressor starts operating when cold room temperature  $\geq$  (set temperature+ hysteresis), and will be off when cold room temperature  $\leq$  set temperature.
  - To protect the compressor,it can re-start unless the time when the compressor stops every time is longer than the delay time(Parameter E4).
2. Abnormal work mode

When sensor is short-circuit or overheated (more than 99°C) " HH" is displayed; when sensor is open-circuit or temperature is too low (less than  $-45^{\circ}\text{C}$  ) " LL" is displayed.
3. Defrosting Functions
  - Operating after a defrost interval time (Parameter F2),it will be automatically in the status of defrost, the LED flashes, and the compressor will stop. When the defrost duration ends, it will be in the normal status of refrigeration.
  - When the defrost interval time is set "00" , the function of automatic defrost will be cancelled.
  - Press **SET** and **▽** button simultaneously and hold for 6 seconds to enter the parameter setup mode while F1 flashes. Press again **SET** button to select F1,F2. Press **△** or **▽** button, the value of parameter will be displayed and can be modified and stored.
  - If no more button is pressed within 6 seconds, the cold-room temperature will be displayed .

Parameter	Function	Set range	Default
F1	Max. Defrost duration	1~90Min	20Min
F2	Defrost interval time	0~24Hr	0Hr

## 4.Circuit Diagram:

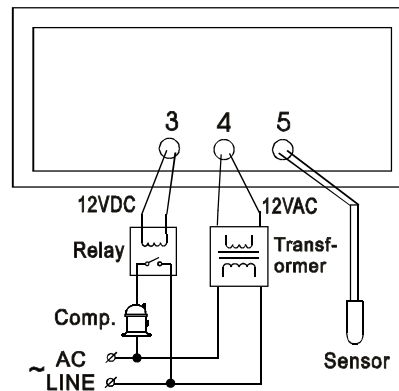

## Notes for Installation

1. Sensor leads must be kept separately from main voltage wires in order to avoid high frequency noise induced. Separate the power supply of the loads from the power supply of the controller.
2. When installation the sensor shall be placed with the head upward and the wire downward.
3. In case of long-distance sensor installation from the controller, the sensor cable may be prolonged up to 100 m max. without any re-calibration.
4. The temperature controller can not be installed in the area with water drops.

## Accessories for the temperature controller

1. One temperature sensor
2. One relay
3. One attached transformer